1 – 10页 中文繁体　36 – 47页 泰文　72 – 84页 巴西葡语
11 – 22页 英文　48 – 59页 韩文
23 – 35页 俄文　60 – 71页 阿拉伯语

工艺：骑马钉 上下两颗
印刷：Pantone cool gray 11C
尺寸：89*115mm
材质：105g双粉

小米電動刮鬍刀五刀頭使用說明書 01
Mi 5-Blade Electric Shaver User Manual 11
Руководство пользователя Электробритвы с 5 лезвиями Mi 5-Blade Electric Shaver 23
คู่มือผู้ใช้เครื่องโกนหนวดไฟฟ้า Mi ใบมีด 5 ใบมีด 36
Mi 5-ใบมีด ที่ว่า ชนิดไว้ ปรับ 48
دليل المستخدم ماكينة حلاقة كهربائية 5-شفرات من Mi 60
Manual do usuário do barbeador elétrico Mi com 5 lâminas 72

封面

封底

使用產品前請仔細閱讀本說明書，並妥善保管。

安全須知

⚠ 警告

1. 請勿自行更換內置電池。
2. 請勿手清潔剃須刀頭，以防損壞或引起故障。
3. 為避免損傷，請勿自行改造或維修產品。

⚠ 注意

1. 本產品非兒童玩具，請勿放置於兒童可觸及到的地方，以免發生危險。
2. 當充電或使用過程出現異常現象時請立即停止使用。
3. 使用前請檢查外刀頭是否變鋒利，如有需要請更換，請更換後再使用。
4. 在使用過程中如遇異常或產生出現故障，請立即停止使用。
5. 本產品在使用環境、儲存及運輸期間，以免造成電池破損或發生其他危險，離開環境後，請關、熄掣，燈號或產生 60℃ 以上高溫環境，以免造成產品損壞。

! 提示

- 在充電和使用過程中，剃鬚刀會有輕微發熱，這屬於正常現象，請放心使用。
- 本產品為家用產品，請勿將剃鬚刀用於對剃鬚刀之外的其他用途。
- 請勿使用酸水、熱水（50℃以上）、稀釋劑、汽油、酒精或液態化學製劑清潔剃鬚刀。
- 使用後請將剃鬚刀存放於乾燥處，避免陽光直射或置於其他熱源附近。
- 除非由具資安合約人士或本品當地之使用地予監督或指導，否則本設備不適用於身體、感覺或精神能力受限，或缺乏經驗和知識的使用者（包括兒童）使用。6 歲及以上兒童，以及之於生理、感知能力或不足，經驗及知識較低的國家的人士可以使用本設備，惟安全提供監督或關於安全使用，並理解本設備所涉及的潛在風險。兒童不得玩弄本設備。兒童不得在未有監督的情況下進行清潔和使用者維護工作。

產品介紹

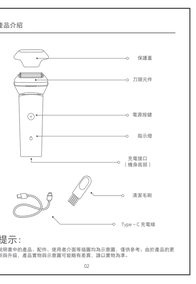

提示：

說明書中的產品、配件、使用者介面等插圖均為示意圖，僅供參考。由於產品的更新與升級，產品實物與示意圖可能略有差異，請以實物為準。

使用

剃鬚指

剃鬚指時，外刀頭或直角輕貼皮膚，逆鬚指生長方向緩慢移動，此時保持皮膚繃緊，可獲得更好的剃鬚指效果。

刀頭功能介紹

注意體力及時間長短，以免過度刮鬚。

- 三刀鋒：三面鋒利金剛石，一體成型刀頭；初一個鋒鋒刀（最利但生長最久）；末個鋒利鋒鋒，鋒鋒鋒鋒刀頭在外側，鋒鋒鋒鋒，有助於切割長髮，修剪短髮時不易造成刺痛。

剃鬚指方法步驟圖示

⚠ 注意

在下巴、鼻頭等柔和部位剃鬚時，請減輕壓力，以免刮傷皮膚。

如鬚頭有痘痘、粉刺、瘡、傷口等皮膚問題，請請教使用，避免刮破皮膚。

存儲溫度：0℃ – 60℃
存儲濕度：20% – 75%

皮膚護理指

- 首次使用本剃鬚刀可能會有輕微的不適感，是因為改變剃鬚習慣不適應所致，並且剃後沒有鬚根，此現象持續數週鬚鬚，並且鬚鬚正常現象。
- 建議在3週時間內至第 1 至少每周至少 2 次使用剃鬚刀，以便皮膚適應新剃鬚刀。

⚠ 注意

- 產品使用時請勿將刀頭直接放置在水下清洗，以免損壞產品。
- 請勿使用酸水、熱水（50℃以上）、稀釋劑、汽油、酒精或液態化學製劑清潔剃鬚刀。
- 使用後請將剃鬚刀存放於乾燥處，避免陽光直射或置於其他熱源附近。

電量指示燈

工作電量顯示		充電電量顯示	
100%~40%	白色常常亮	100%	白色常常亮
40%~20%	橙色常常亮	40%～100%	白色慢閃爍
20%～10%	紅色常常亮	20%～40%	橙色慢閃爍
低於 10%	紅色慢閃爍 3 次（進入保護模式後）	0%～20%	紅色慢閃爍

⚠ 注意

- 請勿在潮濕的環境下充電，充電時，剃鬚刀處於強制關機狀態，無法開機工作。
- 請使用產品包裝內隨附的充電線進行充電。
- 建議在 5℃ 至 35℃ 的環境中進行充電。
- 建議使用額定輸入為 1V ⎓2A 以上的充電器充電；充電時間約為 120 分鐘，充滿電後可持續工作 90 分鐘以上。
- 電池充電過程，應盡早拔出充電線，避免長時間連接外接電源，導致電池使用壽命縮短。

清潔

1. 為了保持剃鬚刀的使用效率，剃鬚指後及時清潔剃鬚刀。
2. 請關掉剃刀時，剃鬚刀應處於關機且未充電狀態。

3. 將刀頭元件垂直內上拔出，使用清潔毛刷清理刀頭元件內部的鬚粉，或放置於水龍頭下清洗干淨。
4. 將清潔的元件晾乾，保持剃鬚刀內部元件的乾燥，再重新裝回機身，直至保護蓋，並妥善保管。
- 刀頭元件保養繼續設計，安裝時不分正反面，直接安裝即可。
- 請勿使用清潔系統清潔剃刀刀網，以免造成內刀網的損壞。
- 清洗刀頭元件後，務必保持內部完全乾燥，避免長時間浸泡於清潔液，可能會出現異味，建議淨洗完後，用清水沖洗，待刀頭完全乾燥後再安裝就緒。

⚠ 警告

警告：在用水清洗之前，請先將設備的手持部分與電源線分離。

在倒回使系示連合在打開的水龍頭下進行清洗。

更換刀頭元件



1. 更換刀頭元件時，確保剃鬚刀處於關機狀態，避免誤開機。
2. 將舊刀頭元件垂直向上拔出，再將新的刀頭元件垂直向下安裝在機身上即可。

! 提示

- 刀頭元件的壽命取決於使用的頻率和個別情況的長短，建議每年更換一次刀頭元件。

WEEE 處置與回收資訊

本產品內置充電電池包含可能污染環境的物質，當產品達到使用壽命時，協請將內置安裝產品的法律法規，可能需要與物內回的充電電池，以便於回收利用及妥善處理，更換產品及收回物品的回收中心。

內置充電電池的回收方法

電池取出方法

①將下刀頭拆下，②拉出電池連接開關處，③用工具將開關蓋上的螺釘，拔出機身，從兩個機殼內拉出電池組件。

注意：
1.危險事項與前，必須將電池從機器內取出。
2.分解過程，要注意安全，一定要戴帽子。
3.要拆電池電量至全無後進行不要立電池。
4.電池電池電量至全無後進行不要立電池。
5.電池電池電量至全無後進行不要立電池。

基本規格

產品名稱：小米電動剃鬚刀五刀頭
產品型號：MSW501
額定功率：10W
額定工作電壓：3.7V ⎓
額定輸入：5V ⎓2A
充電時間：2小時
防水等級：IPX7
生產日期：請查看品包裝
產地：中國鬚東省深圳市

故障檢測

所有產品工作必須自合格人員進行。
如果發現故障，請勿自行拆開設備，以免發生電擊危險。
如果發生故障，例如：
- 電源線或插頭損壞
- 設備暴露在潮濕環境中
- 設備沒有正常運作
- 設備有明顯的損壞跡象。
- 設備不起作用

請立即告知人員。
有關設備的維修和更換，請聯繫產品的服務中心。服務中心的地址顯示在製造商的網站和/或保修卡上。

設備運輸

可通過任何類型的運輸工具（包包裝箱（托盤）等中進行）進行。

設備實踐

設備通過零售和投發員和網路出售。
該設備可以與資訊技術一起出售，也可以單獨出售。

委託商：小米通訊技術有限公司
製造商：天津瑞米技術有限公司
（小米生態鏈企業）
製造商地址：天津市武清區高新區北側創業基地 C02號樓1113室
進口商：台灣小米通訊有限公司
進口商地址：臺北市中正區海生路188號5樓之2
服務電話：02－27253376
本產品售後服務請查詢官網：www.mi.com/tw/service
（以下為香港使用者所適用）
服務電話：852－30773620
本產品售後服務請查詢官網：www.mi.com/hk/service（香港）
保修證書參考小米官網：www.mi.com

說明書版本號：V1.0

Read this manual carefully before use, and retain it for future reference.

Safety Instructions

⚠ Warnings

1. Do not disassemble the shaver to replace the battery.
2. Do not unplug the charging cable with wet hands so as to avoid an electric shock or other malfunction.
3. Do not attempt to modify or repair the shaver yourself to avoid any personal injury or damage to the shaver.

⚠ Caution

1. This shaver and its accessories are not toys. Keep them out of the reach of children to avoid potential danger.
2. Do not use the shaver if its charging cable is damaged or does not reliably stay plugged into the charger.
3. Please check whether the outer mesh of the shaving head is damaged or deformed before use. If so, please replace it before use.
4. Please stop using the shaver immediately in case of any abnormality or malfunction during use.
5. This shaver is powered by lithium battery. Do not disassemble the shaver yourself to avoid potential battery damage or other risks. Do not disassemble, squeeze, puncture, burn, nor place the shaver in environments with high temperatures above 60℃ to avoid a short-circuit.

! Notes

- The shaver will generate heat while charging or during use, this is normal.
- This shaver is a household appliance. Do not use the shaver for any purpose other than shaving.
- Do not use salt water, hot water (above 50℃), paint thinner, gasoline, alcohol, or other chemicals to clean the shaver.
- Store the shaver in a dry place after use, and avoid direct sunlight or other heat sources.
- This appliance is not intended for use by persons (including children) with reduced physical,sensory or mental capabilities, or lack of experience and knowledge,unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

Product Overview

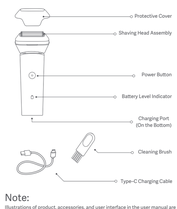

Note:

Illustrations of product, accessories, and user interface in the user manual are for reference purposes only. Actual product and functions may vary due to product enhancements.

How To Use

Shaving

While shaving, it is recommended not to press the shaving head too hard, otherwise the sharp inner blade may damage the skin. It is recommended to lightly and vertically place the outer blade mesh against the skin and slowly move the shaver against the direction of the hair growth to keep the skin light for a better shaving effect.

Shaving Head Description

This shaving head assembly is equipped with two arched shaving blades, two fine shaving blades; one flat shaving blade. The long shaving and fine shaving blades are located on the outer edge of the blade. The long shaving blades can be quickly cut off to reduce having to re-shave, but also to achieve a deep shave and a smooth skin. The independently floating shaving head closely follows the contours of the face, so that even hard-to-shave areas can be easily shaved.

⚠ Caution

- When shaving soft and hard-to-shave areas such as the chin and neck, it is recommended to tighten the skin and shave up and down repeatedly.
- If you have any pimples, acne, cuts, or other skin problems on your face, please use the shaver with caution to avoid cutting the skin.

Skin Adaptation Period

- It may be slightly uncomfortable to use the shaver for the first time, and it is normal for the skin that the first few shavings may not deliver the expected results. This is because your skin needs to adapt to this shaving system.
- It is recommended to shave regularly (at least three times a week) for three weeks and only use this shaver to allow the skin to adapt to it as quickly as possible.

⚠ Caution

Improper use of the shaver can easily cause damage to the shaving head mesh. Please check whether the outer mesh of the shaving head is damaged or deformed before use. If it is damaged, stop using the shaver.

Storage Temperature：0℃ to 60℃
Storage Humidity: 20%–75%

How To Shave



⚠ Caution

- When shaving soft and hard-to-shave areas such as the chin and neck, it is recommended to tighten the skin and shave up and down repeatedly.
- If you have any pimples, acne, cuts, or other skin problems on your face, please use the shaver with caution to avoid cutting the skin.

Skin Adaptation Period

- It may be slightly uncomfortable to use the shaver for the first time, and it is normal for the skin that the first few shavings may not deliver the expected results. This is because your skin needs to adapt to this shaving system.
- It is recommended to shave regularly (at least three times a week) for three weeks and only use this shaver to allow the skin to adapt to it as quickly as possible.

⚠ Caution

Improper use of the shaver can easily cause damage to the shaving head mesh. Please check whether the outer mesh of the shaving head is damaged or deformed before use. If it is damaged, stop using the shaver.

Storage Temperature：0℃ to 60℃
Storage Humidity: 20%–75%

Charging

1. When the remaining battery level is 10–20%, the battery level indicator on the shaver is red. When the battery level is less than 10%, the battery level indicator will blink red three times and then the shaver will turn off. Plug the type-C charging cable into the charging port and connect it to a power outlet to start charging.
2. While charging, the battery indicator blinks according to the battery level. Once the battery is fully charged, the battery level indicator is white constantly.

⚠ Caution

- Do not charge in humid environments. The shaver cannot be turned on or used while charging.
- Please charge the shaver with the charging cable that was included with it.
- It is recommended to charge in an environment with an ambient temperature of 5℃ to 35℃.
- It is recommended to use a charger with a rated input of5 V⎓2 A or more. It takes approx. 120 minutes to charge. The shaver can be used for more than 90 minutes once it is fully charged.
- Unplug the charging cable as soon as possible once the battery is fully charged, to avoid overcharging and reducing the service life of the battery.

Battery Level Indicator

Battery level display during use		Battery level display while charging	
100%–40%	White	100%	White
40%–20%	Orange	40%–100%	Breathing white
20%–10%	Red	20%–40%	Breathing orange
Less than 10%	Blinking red three times (shaver is turned off forcefully)	0%–20%	Breathing red

Cleaning

1. Clean the shaver in time after shaving to maintain its efficiency.
2. Make sure the shaver is off and not being charged during cleaning.

3. Remove the shaving head assembly by pulling it upward and use the cleaning brush to clean the stubbles from the inside of the assembly, or rinse it under running water from a faucet.
4. Wipe away any excess water from the shaving head assembly to dry it, then install it back onto the shaver. Place the protective cover on the shaving head assembly, and store the shaver in a safe place.

- The shaving head assembly features a magnetic design that can be installed directly, regardless of the front or back side.
- Do not use the cleaning brush to clean the outer shaving head mesh to prevent damaging it.
- Once the shaving head assembly has been rinsed, if any residual moisture on the inside is not cleaned up in time, there may be some odor. It is recommended to shake off the water after rinsing and wait for the shaving head assembly to dry completely before installing it and storing the shaver.

⚠ Warnings

WARNING: Detach the hand-held part from the supply cord before cleaning it in water.

The symbol on the left indicates that the shaver is suitable for rinsing under running water from a faucet.

How To Replace Shaving Head Assembly

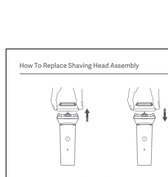

1. Make sure the shaver is off to prevent from accidentally turning it on when replacing the shaving head assembly.
2. Remove the old shaving head assembly by pulling it upward, and then install the new one onto the shaver.

! Notes

- The service life of the shaving head assembly depends on the frequency and duration of use. It is recommended to replace the shaving head assembly once a year.

EU Declaration of Conformity

CE

We, Tianjin Smate Technology Co., Ltd, hereby, declare that this equipment is in compliance with the applicable Directives and European Norms, and amendments. The full text of the EU declaration of conformity is available at the following internet address:
http://www.mi.com/global/service/support/declaration.html

WEEE Disposal and Recycling Information

All products bearing this symbol are waste electrical and electronic equipment (WEE) as in directive 2012/19/EU which should not be mixed with unsorted household waste. Instead, you should protect human health and the environment by handing over your waste equipment to a designated collection point for the recycling of waste electrical and electronic equipment, appointed by the government or local authorities. Correct disposal and recycling will help prevent potential negative consequences to the environment and human health. Please contact the installer or local authorities for more information about the location as well as terms and conditions of such collection points.

Recycling Method For The Built-in Rechargeable Battery

How To Remove The Battery
① Remove the shaving head assembly.
② Pry off the bottom cover from the charging port.
③ Use a tool to loosen the screws and pull out the body of the shaver.
④ Use a soldering iron to remove the battery from the circuit board.

Caution:
- The battery must be removed before the shaver is disposed of.
- Unplug the shaver before disassembly and battery removal.
- Only remove the battery when it is completely depleted.
- Do not charge the shaver after removing its battery.
- The battery should be disposed of in a safe manner.

Environmental Protection & Recycling
This Shaver Contains A Lithium-ion Battery.

Specifications

Name: Mi 5-Blade Electric Shaver
Model: MSW501
Rated Power: 10 W
Rated Operating Voltage: 3.7 V ⎓
Rated Input: 5 V ⎓ 2 A
Charging Time: 2 h
IP Rating: IPX7
Production Date: See product packaging
Made In China

WARRANTY NOTICE

As a Xiaomi consumer, you benefit under certain conditions from additional warranties. Xiaomi offers specific consumer warranty benefits which are in addition to, and not instead of, any legal warranties provided by your national consumer law. The duration and conditions related to the legal warranties are provided by respective local laws. For more information about the consumer warranty benefits, please refer to Xiaomi's official website https://www.mi.com/en/service/warranty/. Except as prohibited by law or otherwise provided by Xiaomi, the consumer warranty benefits are valid in the country or region of the original purchase. Under the consumer warranty, to the fullest extent permitted by law, Xiaomi will, at its discretion, repair, replace or refund your product. Normal wear and tear, force majeure, abuse or damage caused by the user's negligence or fault are not warranted. The contact person for the after-sale service may be any person in Xiaomi's authorized service network, Xiaomi's authorized distributors or the final vendor who sold the products to you. Xiaomi's warranties are provided to the original purchaser only. The present warranties do not apply in Hong Kong and Taiwan.
Products which were not duly imported and/or were not duly manufactured by Xiaomi and/or were not duly acquired from Xiaomi or a Xiaomi's official seller are not covered by the present warranties. As per applicable law you may benefit from warranties from the non-official retailer who sold the product. Therefore, Xiaomi invites you to contact the retailer from whom you purchased the product.

Manufactured for: Xiaomi Communications Co., Ltd.
Manufactured by: Tianjin Smate Technology Co., Ltd.
(a Mi Ecosystem company)
Address: Room No.1118, Building C02, Venture Headquarter Base, Wuqing Development Area, Tianjin, P.R. China
For further information, please go to www.mi.com

User Manual Version: V1.0

Перед использованием внимательно прочтите это руководство. Сохраните его – оно может понадобиться вам в дальнейшем.

Инструкция по технике безопасности

⚠ Предупреждение

1. Не разбирайте бритву для замены батареи.
2. Не отсоединяйте кабель для зарядки влажными руками, чтобы избежать поражения электрическим током или других повреждений прибора.
3. Не пытайтесь модифицировать или ремонтировать бритву самостоятельно, во избежание травм или повреждения бритвы.

⚠ Внимание

1. Данная бритва и аксессуары к ней не являются игрушками. Держите их вне досягаемости детей, во избежание потенциальной опасности.
2. Не используйте бритву, если ее кабель для зарядки поврежден или ненадежно подключен к зарядному устройству.
3. Перед использованием проверьте, не повреждена ли внешняя сетка бритвенной головки. Если повреждена, то замените ее перед использованием.
4. Немедленно прекратите использование бритвы в случае каких-либо отклонений от нормы или неисправности во время использования.
5. Данное электробритва содержит литиевую батарею. Не разбирайте бритву самостоятельно, во избежание повреждения батареи или другого ущерба. Не разбирайте, не сжимайте, не прокалывайте, не сжигайте и не помещайте бритву в среду с высокими температурами выше 60 °C, во избежание короткого замыкания.

! Примечания

- Бритва нагревается во время зарядки или использования, это нормальное явление.
- Данная бритва предназначена для домашнего использования. Используйте бритву только для бритья.
- Не используйте для очистки бритвы соленой водой, горячую воду (горячее 50 °C), растворитель, бензин, спирт или другие химические вещества.
- Этот прибор не должен использовать лица (взрослые или дети) с ограниченными физическими, сенсорными или умственными способностями или, не обладающие соответствующим опытом и знаниями, если они не находятся под присмотром или руководством человека, ответственного за их безопасность. Дети в возрасте от 8 лет и лица с ограниченными физическими, сенсорными или умственными способностями или недостаточным опытом и знаниями могут использовать данное устройство при условии предоставления им инструкций по технике безопасности и осознании возможных рисков. Дети не должны играть с устройством. Не разрешайте детям чистить устройство и выполнять другие мероприятия по уходу за ним без присмотра взрослых.

Описание изделия

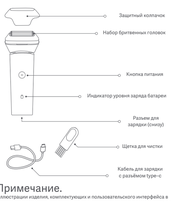

Примечание.

Иллюстрации изделия, комплектующих и пользовательского интерфейса в руководстве пользователя представлены исключительно в ознакомительных целях. Фактические характеристики продукта и его функции могут отличаться в связи с улучшением продукта.

Инструкция

Бритье

Во время бритья рекомендуется не нажимать на бритвенную головку слишком сильно, иначе остров внутреннее лезвие может повредить кожу. Рекомендуется слегка и вертикально поместить сетку внешнего лезвия к коже и медленно перемещать бритву против направления роста волос, чтобы кожа оставалась натянутой для лучшего эффекта бритья.

Бомбардировка бритвенной головки

Данный набор бритвенных головок оснащен двумя изогнутыми бритвенными лезвиями, двумя лезвиями для дополнительного бритья и одним плоским лезвием. Длинные лезвия и лезвия для дополнительного бритья расположены органично сочетается друг с другом, что позволяет быстро срезать длинные, короткие, жесткие и тонкие щетины, и снижает необходимость повторного бритья, а также обеспечивает глубокое бритье и гладкую кожу. Свободно плавающая бритвенная головка точно повторяет контуры лица, поэтому можно легко обрить даже трудно бреющиеся участки.

Как бриться



⚠ Внимание

- При бритве мягких и трудно поддающихся бритью участков кожи, таких как подбородок и шея, рекомендуется поступать кожу и несколько раз брить не вверх и вниз.
- Если у вас есть прыщи, язвы, порезы или другие кожные проблемы на лице, используйте бритву внимательно, чтобы не порезать кожу.

Период адаптации кожи

- Использование бритвы в первый раз может быть немного дискомфортным, и совершенно нормально, что первые несколько раз процесс бритья может не принесть ожидаемых результатов. Это происходит потому, что вашей коже необходимо адаптироваться к системе бритья.
- Рекомендуется бриться регулярно (не реже трех раз в неделю в течение трех недель) и использовать эту бритву, чтобы кожа как можно быстрее адаптировалась.

⚠ Внимание

Неправильное использование бритвы может легко привести к повреждению сетки бритвенной головки. Перед использованием проверьте, не повреждена ли внешняя сетка бритвенной головки. Если повреждена, прекратите использование бритвы.

Температура хранения: 0~60 °C
Влажность при хранении: 20~75%

Индикатор уровня заряда батареи

Дисплей уровня заряда батареи во время использования		Дисплей уровня заряда батареи во время зарядки	
100%–40%	белый	100%	белый
40%–20%	оранжевый	40%–100%	белый пульсирующий дабой
20%–10%	красный	20%–40%	пульсирующий оранжевый
Менее 10%	Трижды мигающий красным (бритва выключена принудительно)	0%–20%	Пульсирующий красный

Очистка

1. Своевременно очищайте бритву после бритья, чтобы поддерживать ее работоспособность.
2. Перед чисткой убедитесь, что бритва выключена и не находится в процессе зарядки.

3. Снимите набор бритвенных головок, потянув его вверх, и используйте щетку для чистки, чтобы удалить щетину изнутри набора, или промойте его под проточной водой из крана.
4. Выньте излишки воды с набора бритвенных головок, чтобы высушить его, и затем снова установите на бритву. Установите защитный колпачок на набор бритвенных головок и оставьте бритву в безопасном месте.

- Набор бритвенных головок имеет магнитную конструкцию, которую можно устанавить напрямую, независимо от передней или задней стороны.
- Не используйте щетку для чистки внешней сетки бритвенной головки, чтобы не повредить ее.
- Если после промывки набора бритвенных головок вовремя не убрать остаточную влагу внутри, может появиться неприятный запах. Перед установкой и хранением бритвы рекомендуется стряхнуть воду после ополаскивания и дождаться полного высыхания набора бритвенных головок.

⚠ Предупреждение

ПРЕДУПРЕЖДЕНИЕ: Отсоедините вилку от шнура питания, прежде чем мыть ее.

Символ слева является индикатором того, что бритву можно полоскать под проточной водой из-под крана.

Как заменить набор бритвенных головок

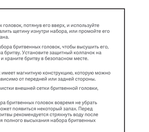

1. Убедитесь, что бритва выключена, чтобы предотвратить ее случайное включение при замене набора бритвенных головок.
2. Снимите старый набор бритвенных головок, потянув его вверх, а затем установите новый на бритву.

! Примечания

- Срок службы набора бритвенных головок зависит от частоты и продолжительности использования. Рекомендуется заменить набор бритвенных головок один раз в год.

Информация об утилизации и переработке отходов электрического и электронного оборудования

Все изделия, обозначенные символом раздельного сбора отработанного электрического и электронного оборудования (WEEE, директива 2012/19/EU), следует утилизировать отдельно от несортированных бытовых отходов. Вместо этого, с целью защиты окружающей среды такое оборудование необходимо сдавать на переработку в специальные пункты приема электрического и электронного оборудования, определенные правительством или местными органами власти. Правильная утилизация и переработка помогут предотвратить возможные негативные последствия для окружающей среды и здоровья человека. Для получения более подробной информации о том как они работают, обратитесь в компанию, занимающуюся установкой оборудования, или в местные органы власти.

Method for Recycling Built-in Battery

How to remove the battery:
① Remove the shaving head assembly.
② Remove the bottom cover from the charging port.
③ Use a tool to loosen the screws and remove the shaver body.
④ Use a soldering iron to remove the battery from the circuit board.

Caution:
- The battery must be removed before the shaver is disposed of.
- Unplug the shaver before disassembling and removing the battery.
- Only remove the battery when it is completely depleted.
- Do not charge the shaver after removing its battery.
- The battery should be disposed of in a safe manner.

Environmental Protection & Recycling
This Shaver Contains A Lithium-ion Battery.

Specifications

Name: Mi 5-Blade Electric Shaver
Model: MSW501
Rated Power: 10 W
Rated Operating Voltage: 3.7 V ⎓
Rated Input: 5 V ⎓ 2 A
Charging Time: 2 h
IP Rating: IPX7
Production Date: See product packaging
Made In China

Method for Recycling Built-in Battery

How to remove the battery:
① Remove the shaving head assembly.
② Remove the bottom cover from the charging port.
③ Use a tool to loosen the screws and remove the shaver body.
④ Use a soldering iron to remove the battery from the circuit board.

Caution:
- The battery must be removed before the shaver is disposed of.
- Unplug the shaver before disassembling and removing the battery.
- Only remove the battery when it is completely depleted.
- Do not charge the shaver after removing its battery.
- The battery should be disposed of in a safe manner.

Environmental Protection & Recycling
This Shaver Contains A Lithium-ion Battery.

Specifications

Name: Mi 5-Blade Electric Shaver
Model: MSW501
Rated Power: 10 W
Rated Operating Voltage: 3.7 V ⎓
Rated Input: 5 V ⎓ 2 A
Charging Time: 2 h
IP Rating: IPX7
Production Date: See product packaging
Made In China

Method for Recycling Built-in Battery

How to remove the battery:
① Remove the shaving head assembly.
② Remove the bottom cover from the charging port.
③ Use a tool to loosen the screws and remove the shaver body.
④ Use a soldering iron to remove the battery from the circuit board.

Caution:
- The battery must be removed before the shaver is disposed of.
- Unplug the shaver before disassembling and removing the battery.
- Only remove the battery when it is completely depleted.
- Do not charge the shaver after removing its battery.
- The battery should be disposed of in a safe manner.

Environmental Protection & Recycling
This Shaver Contains A Lithium-ion Battery.

Specifications

Name: Mi 5-Blade Electric Shaver
Model: MSW501
Rated Power: 10 W
Rated Operating Voltage: 3.7 V ⎓
Rated Input: 5 V ⎓ 2 A
Charging Time: 2 h
IP Rating: IPX7
Production Date: See product packaging
Made In China

Обнаружение дефектов

Все ремонтные работы должны проводить квалифицированным персоналом. При обнаружении неисправности не снимайте оборудование самостоятельно, во избежание было опасности электрошока.
В случае отказа, например:
- шнур питания или разъем
- оборудование имеет признаки воздействие влажности
- оборудование упало или повреждено
- есть явные признаки неисправности оборудования.
- устройство не работает
Обратитесь в ближайшую мастерскую с квалифицированным персоналом. Ремонт и замена соответствующего оборудования, пожалуйста, свяжитесь с ближайшим сервисом. Адрес сервиса указан на веб-сайте производителя или гарантийной карте.

Транспорт оборудования
Это может быть сделано любым транспортным средством (в упакованной упаковке (поднятой) и т.д.

Реализация оборудования
Оборудование продается через розничную и оптовую сеть торговли. Продукт может быть продан вместе с информационной технологией или отдельно.

Изготовлено для: Xiaomi Communications Co., Ltd.
Изготовитель: Tianjin Smate Technology Co., Ltd.
(компания Экосистемы Mi)

Адрес: Room No.1118, Building C02, Venture Headquarter Base, Wuqing Development Area, Tianjin, P.R. China

Чтобы получить дополнительную информацию, посетите сайт www.mi.com

Версия руководства пользователя: V1.0

ข้อมูลที่ต้องแจ้งเพื่อให้ทราบเกี่ยวกับ ระบบการใช้ซ้ำ ที่มีอ่าง ฝั่งแบ ทท

ทำความเข้าใจคำศัพ ว่าอย่างไร

ทำเช่นไร

ถ้า: ทำเช่นไรถึงจะ ใช้ได้ Mi ยะ 5 ใบมีด

ใช้: ทำเช่นไรถึงจะ

ถึงจะ: 10 W

ถึงจะทำงาน ได้ที่ปกติ ที่ถูกกำหนด: 3.7 V ⎓

ถึงได้ตลอด: 5 V ⎓ 2 A

เวลาที่ ถึง 2 ชม.

ผลของ IP: IPX7

ผลิตในประเทศจีน

! หมายเหตุ

- เครื่องโกนหนวดไฟฟ้าจะร้อนขึ้นขณะชาร์จหรือใช้งาน ซึ่งเป็นปรกติ
- เครื่องโกนหนวดไฟฟ้านี้เป็นอุปกรณ์ในครัวเรือน ห้ามใช้เพื่อวัตถุประสงค์อื่นนอกเหนือจากการโกนหนวด
- ห้ามใช้น้ำเกลือ น้ำร้อน (เกิน 50°C) ทินเนอร์ เบ็นซิน แอลกอฮอล์หรือสารเคมีใดๆ ในการทำความสะอาดเครื่องโกนหนวด
- เก็บเครื่องโกนหนวดในที่แห้งหลังใช้งาน ห้ามวางเครื่องโกนหนวดไว้ใกล้แหล่งความร้อนอื่นๆ
- ผลิตภัณฑ์ชิ้นนี้ใช้ลิเธียมไอออนแบตเตอรี่ ห้ามถอดชิ้นส่วนเครื่องโกนหนวดด้วยตนเอง เพื่อป้องกันไม่ให้เกิดความเสียหายต่อแบตเตอรี่ ห้ามถอดชิ้นส่วน ห้ามบีบ ห้ามเจาะ ห้ามเผา หรือวางเครื่องโกนหนวดในสภาพแวดล้อมที่มีอุณหภูมิสูงเกินกว่า 60°C เพื่อป้องกันการลัดวงจร

! หมายเหตุ

- เครื่องโกนหนวดไฟฟ้าจะร้อนขึ้นขณะชาร์จหรือใช้งาน ซึ่งเป็นปรกติ
- เครื่องโกนหนวดไฟฟ้านี้เป็นอุปกรณ์ในครัวเรือน ห้ามใช้เพื่อวัตถุประสงค์อื่นนอกเหนือจากการโกนหนวด
-